



ACC-2036

Diamond Plate Kick Plate

Club Car Precedent

Installation Instructions




Contents of ACC-2036 Diamond Plate Kick Plate:

- a (1 ea.) Kick Plate
- b (4 ea.) #10 x 1.0" Self Tapping Screws

**Caution:** Please read through the instructions carefully. Look behind each drill location BEFORE YOU DRILL. Installer is responsible for damage (i.e. drilling into a wiring harness, battery, fuel tank etc.).


## Diamond Plate Kick Plate Installation

1. Remove existing decorative Kick Plate (if any). The OEM plastic Kick Plate will remain in place.
2. Align the new Kick Plate against the OEM Kick Plate. The bottom should be level with the floor. The Kick Plate should be centered on the body. The opening should line up with the Charger Outlet (on an electric cart) or the Choke (on a gas cart).

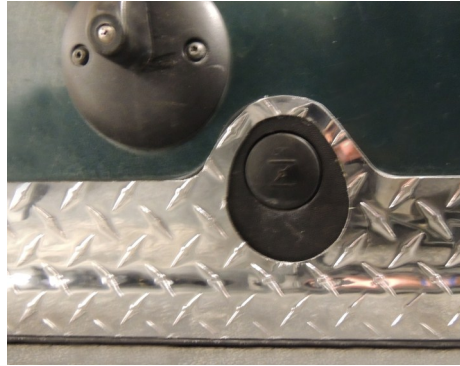

1. Secure the Kick Plate with (4) #10 x 1.0" Self Tapping Screws. Place them in the (4) corners about 1/4" away from the edges.

**Note:** Look behind each drill location BEFORE YOU DRILL. Installer is responsible for damage (i.e. drilling into a wiring harness, battery, fuel tank etc.).

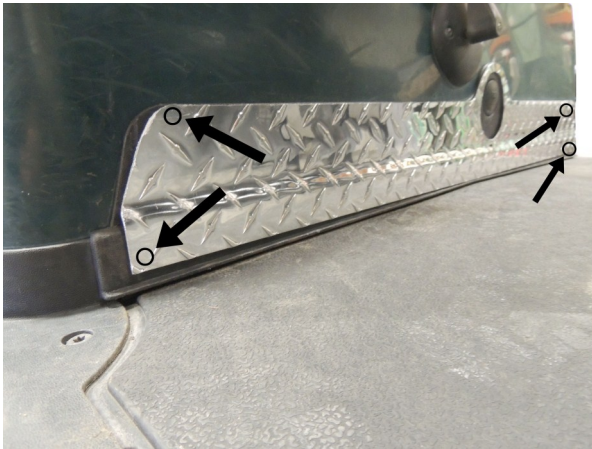

This completes the installation of your Precedent Diamond Plate Kick Plate. Please enjoy safely!