



# BG-528


Club Car Tempo

## RHOK BMF Heavy Duty Front Brush Guard Face Plate Installation Instructions



### Installation

1. Line up face plate on the front of the brush guard with the logo upright and facing forward. Rear of brush guard shown below for visibility purposes.
2. Fasten the face plate to the brush guard using the Included Hardware. Hand tighten.

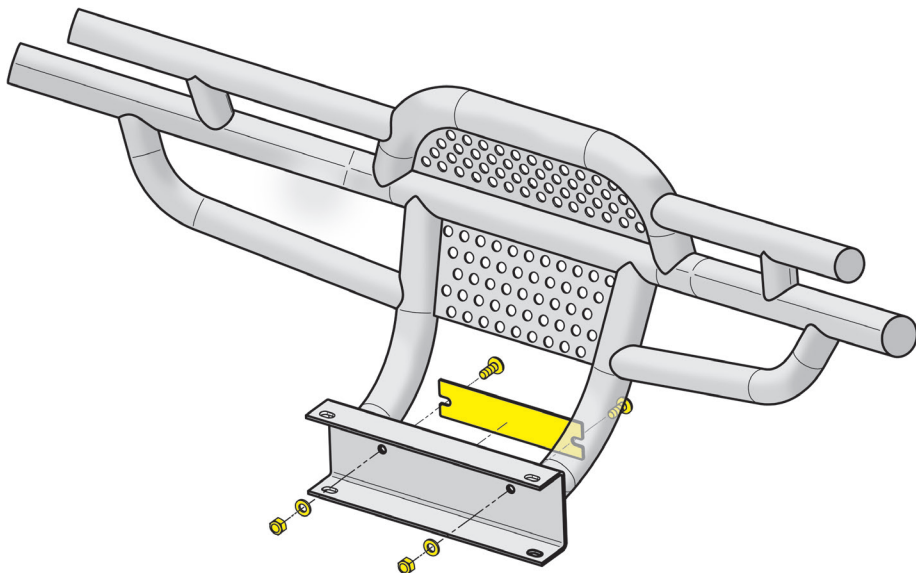

This completes the installation of your  
Face Plate. Please enjoy safely!