




POWERWISE™

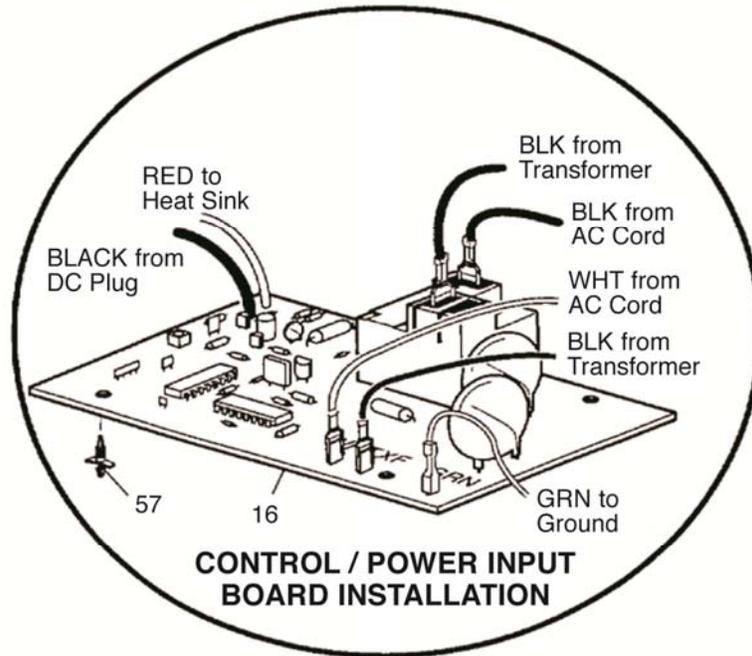

Charger Board, E-Z-Go Powerwise, Part Number: CGR-026

The CGR-026 is an improved circuit board that replaces both of the OE circuit boards found in a Powerwise Charger. You will remove both circuit boards in the charger and replace them with one CGR-026 circuit board using the above diagram and instructions below.

- Mount the CGR-026 in the location where the input power board was mounted. This board has red and white wire connections and is closest to the capacitor.
- Route the black wire between the heat sink and transformer and attach to the DC cord lead with the female terminal.
- Attach the red wire to the heat sink board.
- All other connections from the AC power cord and the transform connect in the same positions as the previous circuit board.

*If your non-working Powerwise charger has only one circuit board, then the circuit board conversion has already taken place and you should disregard directions above and install the CGR-026 circuit board in the same configuration as the current circuit board.