



RAD-913 Speaker Pod Kit

E-Z-Go TXT 94+

Installation Instructions

Caution: Please read through the safety information and instructions before installing this product. Look behind each drill location **BEFORE DRILLING**. Installer is responsible for damage. Safety glasses should be worn during installation.

Specifications

Fits Speakers: 5.25"-6"

Speakers sold separately.

Tools Needed for Installation

- Ratchet and 15/16" Socket
 - Phillips Screwdriver
 - Drill and Drill Bits: 1/16" and 3/16"


- Rubber Mallet
 - Rivet Gun (Optional)
 - Torque Wrench

Before You Start

1. Turn the key to the OFF position.
2. Place the TOW/RUN switch in TOW (if equipped).
3. Engage the parking brake.


Installation Instructions

1. Remove the scorecard holder or steering wheel cover from the center of the steering wheel by pushing in the (4) tabs on the back of the steering wheel.
 2. Loosen the nut on the center of the steering wheel (shown in yellow) using a 15/16" socket. With the nut loosely threaded at the top of the steering shaft, remove the steering wheel from the splines using a rubber mallet to tap it loose from behind.
 3. Remove the nut and steering wheel from the shaft. Retain hardware and steering wheel for reinstallation.
 4. Place the driver side speaker pod over the steering shaft and into place as shown below.
 5. Align the speaker pod and make sure it fits snug. Use the pod as a template and mark the mounting hole locations onto the floor, top and side using a marking device.
 6. Use a 1/16" drill bit to drill pilot holes at the marked locations for the included mounting screws.
- NOTE:** RIV-009A Rivets (not included) can be used for the holes in the floor if desired. If using these rivets, drill a 3/16" hole through the marked locations on the floor.
7. Fasten the speaker pod to the cart using the included Pan Head Screws. Do not over tighten.
 8. Repeat steps 5-7 for the passenger side speaker pod.
 9. Making sure the steering wheel is aligned, reinstall the steering wheel to the shaft using the Original Hardware. Tighten the nut to 15-20 ft. lbs. Do NOT overtighten nut.
 10. Reinstall the scorecard holder to the steering wheel by snapping it into place.

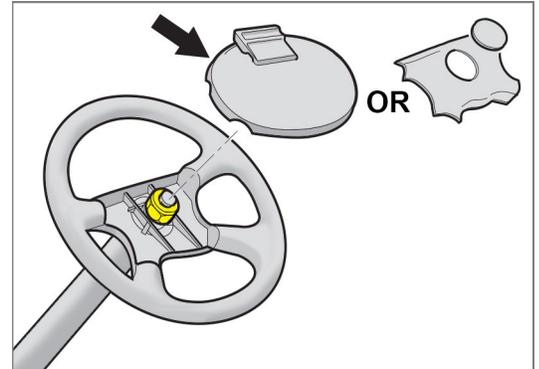


This completes the installation of your Speaker Pod Kit!
 Please enjoy safely!

Scan QR code or use the link below to view the installation video.
<https://vimeo.com/user39935056>

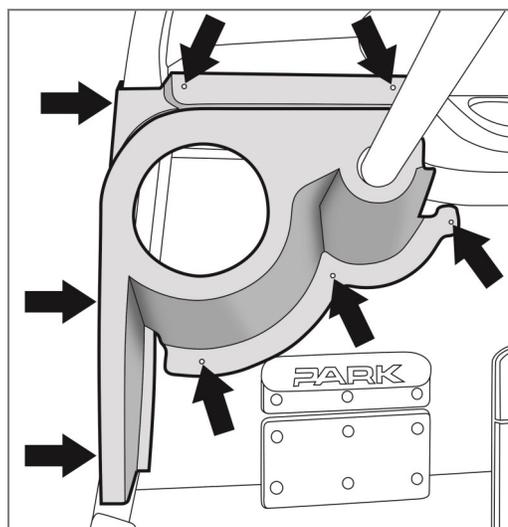

(Driver Side)

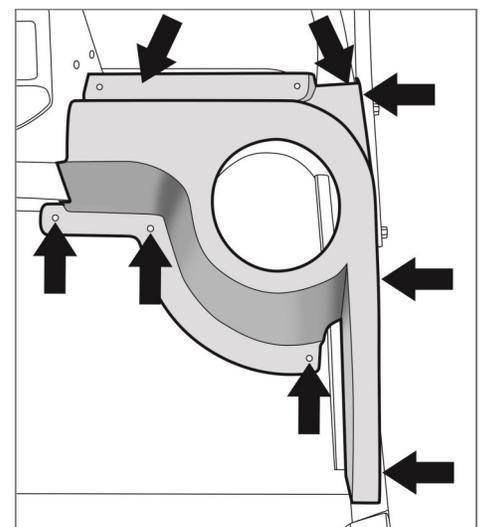

(Passenger Side)