



TOP-0023 Extension Brackets 80" & 88" Tops

E-Z-Go Medalist / TXT

Installation Instructions



Contents of TOP-0023 Extension Brackets:

(2 ea.) Extension Brackets

Recommended Hardware (Not Included):

(2 ea.) 5/16-18 x 1.5" Hex Head Bolts
(2 ea.) 5/16-18 x 1" Carriage Bolts
(6 ea.) 5/16" Flat Washers
(4 ea.) 5/16-18 Nylock Nuts

Before You Start


1. Turn the key to the OFF position.
2. Place the TOW/RUN switch in the TOW position (electric carts).
3. Engage the parking brake.
4. Chock the wheels to prevent the cart from moving.

Installation Preparation

1. If the cart currently has a top, remove it and discard.

Extension Bracket Installation


1. Locate the (2) holes on the top of the front strut.
2. Using (2) 5/16-18 x 1.5" Hex Head Bolts, (4) 5/16" Flat Washers and (2) 5/16-18 Nylock Nuts, secure the brackets to the front strut as shown. Do not fully tighten.

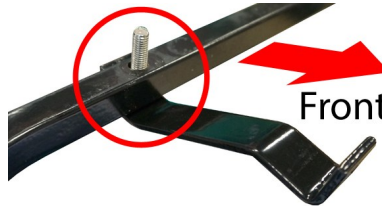

3. Insert (2) 5/16-18 x 1" Carriage Bolts into the opening of the channel on the underside of the 80"/ 88" top. Slide them to the front of the top.



4. Secure the brackets to the carriage bolts using (2) 5/16" Flat Washers and (2) 5/16-18 Nylock Nuts.

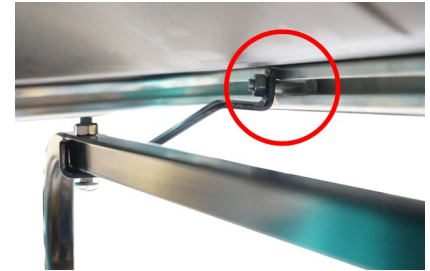

5. Attach the top to the rear struts.
6. Once in place, tighten all hardware.

Your Extension Brackets are now complete.
Please enjoy safely!