




TOP-0071, TOP-0072 and TOP-0073 88" Universal Top on an E-Z-Go TXT/RXV Installation Instructions

Caution: TOP-0071/0072/0073 is universal. The installation steps may vary depending on the year, make and model of the cart as well as the rear seat kit/rear strut manufacturer. For the example below, the 88" top was installed on an E-Z-Go TXT with a RHOX Rear Seat Kit and RHOX Rear Struts (TOP-0101).

Safety glasses should be worn when drilling. Verify all drilling locations before drilling. Installer is responsible for damage (i.e. holes drilled in the incorrect location etc.).

Before You Start

1. If the vehicle is ON, turn the key to the OFF position.
2. Engage the parking brake.

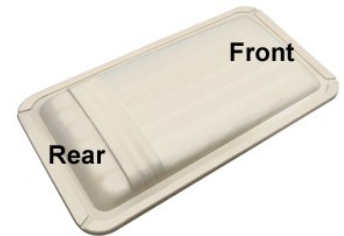

Installation Instructions

1. Install the rear struts per the seat kit manufacturer's instructions if not previously installed.
2. Place the top on top of the struts with the deeper side of the top towards the rear of the cart. Align the front of the top with the front strut(s) and center it. The TXT's front strut fits inside of the innermost channel.

3. Use the factory predrilled holes* in the front strut(s) as a guide, and mark (2) hole locations on the top. Remove the top from the cart and drill a 5/16" hole at each marked location using caution to only drill through one side of the channel.



* If struts do not have predrilled holes in the desired location for mounting, mark the hole locations on the top and use those holes as a guide for the strut(s). Remove the top before drilling the struts. The ribs under the top can be used as a measuring tool to make sure the holes are evenly spaced.

4. Replace the top and loosely secure it to the front strut(s) with 1/4-20 hardware (not included).
5. Locate an area on the top to mount the rear struts. On this TXT, the RHOX rear struts (TOP-0101) fit comfortably inside of the innermost channel. With one rear strut in place, use the factory predrilled holes* as a guide to mark (2) hole locations for that strut. Repeat the same process for the opposite strut. The ribs under the top can be used as a measuring tool to make sure the struts are at the same distance.
6. Remove the top and drill 5/16" holes at the marked locations using caution to only drill through one side of the channel. Place the top back on the struts and secure it with 1/4-20 Hardware (not included). Tighten all hardware.



The installation of the RHOX 88" Universal Top is now complete.
Please enjoy safely!