



# ACC-0109 Complete Horn Kit Installation Instructions

## Contents of ACC-0109 Kit

- (1) 12V Horn w/ Mounting Hardware
- (1) Horn Button (ACC-0003)
- (1) Horn Decal (ACC-0008)
- (1) Horn Harness (LGT-146N)
- (1) Power Supply Harness
- (1) Inline Fuse Holder w/ 10A Fuse
- (1) Butt Splice Connector, 22-18ga.
- (2) Ring Terminals, 22-18ga.
- (2) Split Side Rivets, 3/16 x 3/8 x .450

## Tools Required

- Phillips Screwdriver
- Drill and Drill Bits (7/32", 5/8")
- Wire Cutters, Strippers and Crimpers
- Rivet Gun
- Marking Device



**Caution:** This accessory is designed for **12V DC operation only**. Operating this kit at a higher voltage will void any and all warranties.


## Before You Start

1. If the vehicle is ON, turn the key to the OFF position.
2. Electric Carts: Place the TOW/RUN switch in the TOW position.
3. Remove the vehicle's positive & negative connections from the battery/battery pack.
4. Engage the parking brake.

## Horn Installation



1. Connect the spade connectors from the horn harness to the back of the horn on either terminal as shown on the reverse side of the instructions.

2. Mount the horn under the driver side front end of the vehicle in a location free of moving parts using the Included Hardware. Use a pre-drilled hole or drill a 1/4" hole in a safe location on the golf cart frame. The horn should face away from the cart and its passengers.

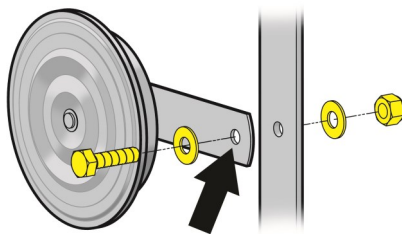

3. Find a convenient location on the floor to mount the horn button. This area should be free and clear of obstacles and wiring harnesses. Drill a 5/8" hole through the floor at the location. Cut away the floor mat over the hole.

4. Insert the horn button in the hole from the underside of the cart. Place the horn decal over the horn button. Screw the rubber button cover onto the horn button. Do not tighten.
5. Align the decal so it is straight. Mark the (2) hole locations for the decal onto the floor mat. Remove the horn button, cover and decal. Drill the (2) marked hole locations with a 7/32" bit.
6. Install the horn button and decal as shown using the Included Rivets.
7. Connect the (2) ring terminals on the horn harness to the back of the horn button on either terminal.
8. Connect the horn harness to the power harness, fuse and 12V battery source as shown below:

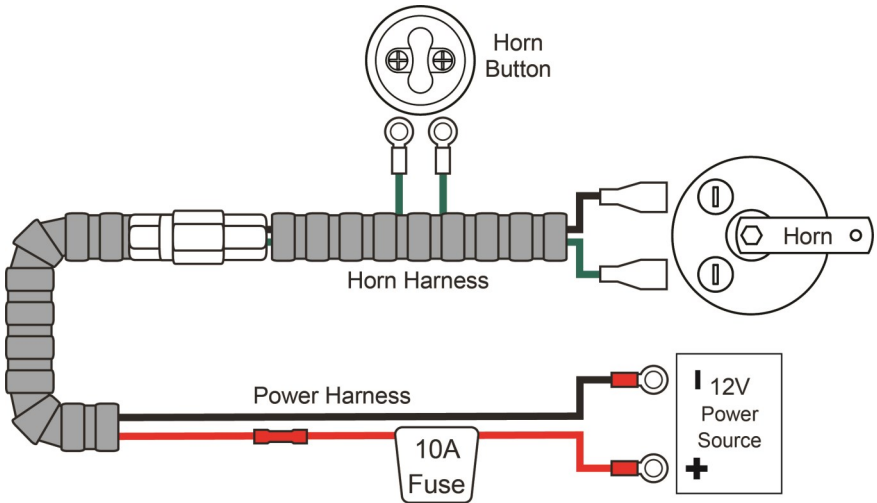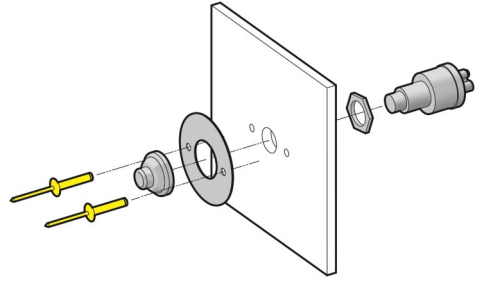

This completes the installation of your RHOX Complete Horn Kit.  
Please enjoy safely!

Scan QR code or use the link below to  
view the installation video.

<https://vimeo.com/user39935056>

