


Golf Cart Mat Installation Instructions

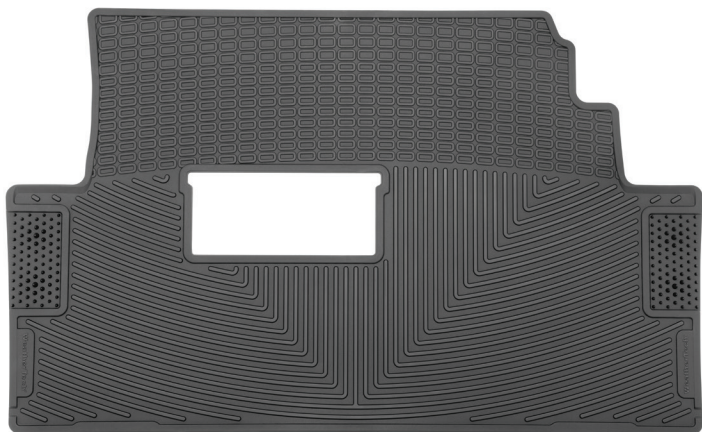

 [Install Video](#)



1 Make sure key is in off position, and the brake pedal is in locked position. Clear your golf cart floor of dirt and debris.



2 Locate the pedal box opening on your Golf Cart Mat. This opening will completely surround the accelerator and brake pedals.



3 Make sure your Golf Cart Mat lays completely flat around the pedals and rear wall of footwell.



4 Bend the forward portion of the Golf Cart Mat under your golf cart's cup holders.



5 Adjust as needed. Congratulations! Your new WeatherTech Golf Cart Mat is installed!