


REDHAWK

ROCKER PANEL

Part# RH8742

E-Z-GO, TXT (2013&UP)

INSTALLATION INSTRUCTIONS

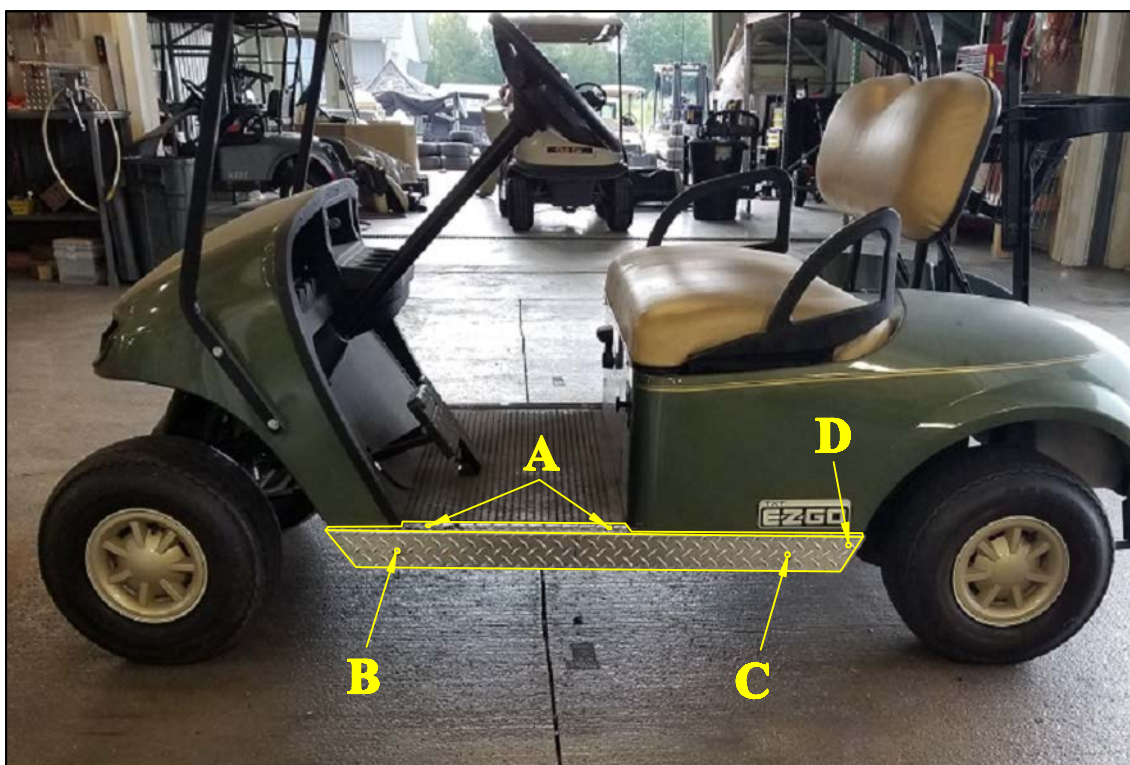

NOTE:

Save all OEM hardware for re-use. Do not tighten any bolts until all bolts are in place and started.

STEP 1:

Remove the OEM side trim from the car.

STEP 2:

Place the Rocker Panel (Part#8742) against the car. Re-install the OEM bolts at (Location A) only.



TITLE: RH8742 INSTALLATION INSTRUCTIONS		
DRAWN BY: R. HAERER	DATE: June 17, 2020	DWG NO. # 8766-1
SHEET: 1 of 2	SCALE: Not To Scale	

STEP 3:

At (Location B), place (1)- $\frac{5}{8}$ " Spacer (Part#8774) behind the rocker panel and secure with:
 (1)- $\frac{1}{4}$ " x $1\frac{3}{4}$ " Pan Head Bolts, (2)- $\frac{1}{4}$ " Flatwashers. (1)- $\frac{1}{4}$ " Locknut.

STEP 4:

Place (1)- $\frac{3}{8}$ " Spacer (Part#8773) behind the rocker panel at (Location C), and secure with:
 (1)- $\frac{1}{4}$ " x $1\frac{1}{4}$ " Pan Head Bolts, (2)- $\frac{1}{4}$ " Flatwashers. (1)- $\frac{1}{4}$ " Locknut.

STEP 5:

Screw (1)- $\frac{1}{4}$ " x $1\frac{1}{4}$ " Pan Head Sheet Metal Screw, (1)- $\frac{1}{4}$ " Flatwasher through the rocker panel and into the hole in the cars frame at (Location D). *Do NOT over tighten!*

STEP 6:

Tighten all bolts and repeat for the other side.

REDHAWK

ROCKER PANEL

Part# RH8742

E-Z-GO, TXT (2013&UP)

BOLT KIT

2- $\frac{1}{4}$ " x $1\frac{3}{4}$ " PAN HEAD BOLTS
 2- $\frac{1}{4}$ " x $1\frac{1}{4}$ " PAN HEAD BOLTS
 2- $\frac{1}{4}$ " x $1\frac{1}{4}$ " PAN HEAD SHEET METAL SCREWS
 10- $\frac{1}{4}$ " FLATWASHERS
 4- $\frac{1}{4}$ " LOCKNUTS
 2- $\frac{5}{8}$ " SPACER (PART#8774)
 2- $\frac{3}{8}$ " SPACER (PART#8773)

BOX KIT

1- BOLT KIT
 1- INSTRUCTIONS
 2- ROCKER PANELS (PART#8742)(D&P)



TITLE: <div style="text-align: center; font-size: 1.2em; margin-top: 10px;">RH8742</div> <div style="text-align: center; font-size: 1.1em;">INSTALLATION INSTRUCTIONS</div>		
DRAWN BY: <div style="text-align: center;">R. HAERER</div>	DATE: <div style="text-align: center;">June 17, 2020</div>	DWG NO. <div style="text-align: center; font-size: 1.2em; margin-top: 10px;"># 8766-1</div>
SHEET: <div style="text-align: center;">2 of 2</div>	SCALE: <div style="text-align: center;">Not To Scale</div>	