




# SEAT-682

## RHOX Bag Attachment

### Fits RHOX SEAT-691 and SEAT-688 Safety Grab Bars Assembly Instructions

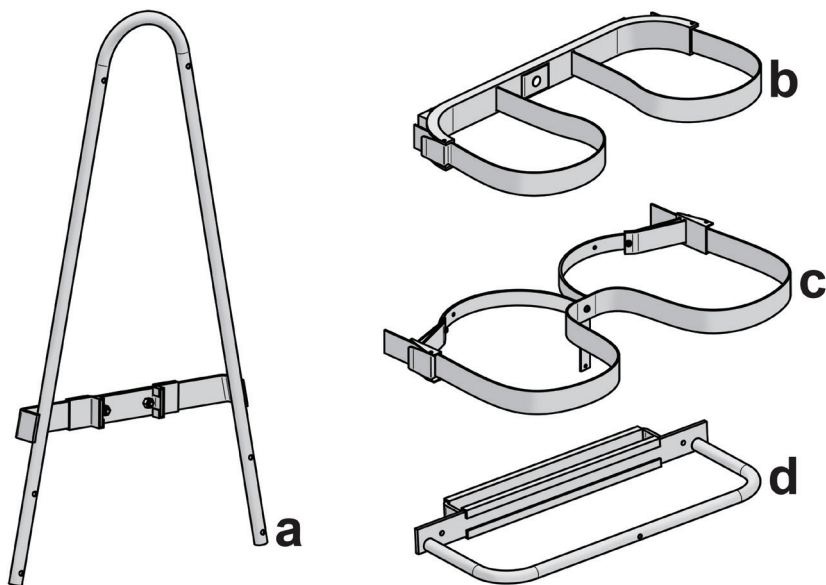

Contents of Kit		QTY
a	A-Frame	1
b	Upper Bag Support	1
c	Lower Bag Support	1
d	Base Frame	1
e	Hardware (Contents on Next Page)	1

**Caution:** Please read through the instructions carefully. Installer is responsible for damage if instructions are not followed properly.

## Hardware Kit




Contents		QTY
a	M6 x 30mm Button Head Cap Screws	5
b	M6 Nylock Nuts	5
c	M6 Flat Washers	10
d	M6 Rubber Coated Bumper Nuts	2

## Tools Needed for Assembly


- Sockets and Open Ended Wrenches (10mm)
- 4mm Hex Bit

## Bag Attachment Assembly


1. Fasten the base frame to the A-frame using (2) M6 x 30 Button Head Cap Screws, (4) M6 Flat Washers and (2) M6 Nylock Nuts. Hand tighten.

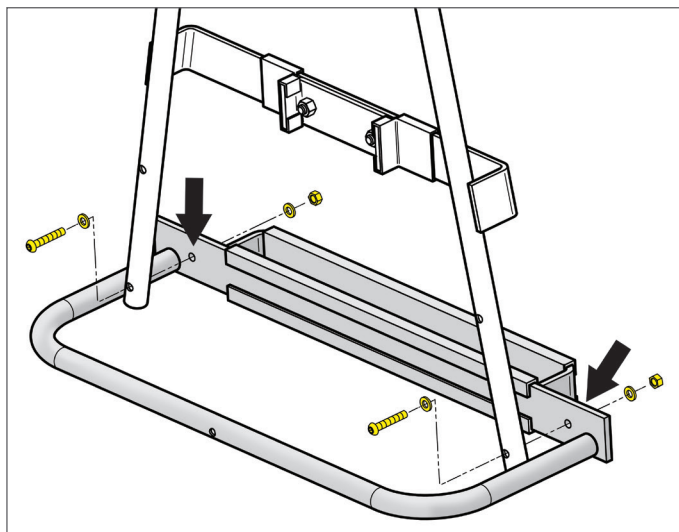

2. Fasten the lower bag support to the A-frame using (2) M6 x 30 Button Head Cap Screws, (4) M6 Flat Washers and (2) M6 Nylock Nuts. Hand tighten.

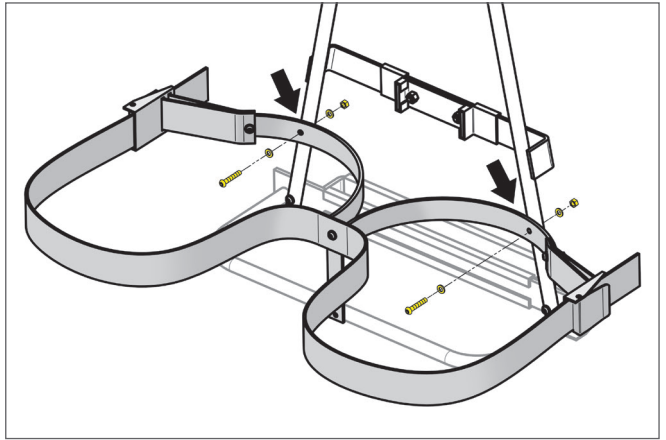


3. Fasten the vertical bracket on the lower bag support to the base frame using (1) M6 x 30 Button Head Cap Screw, (2) M6 Flat Washers and (1) M6 Nylock Nut. Hand tighten.

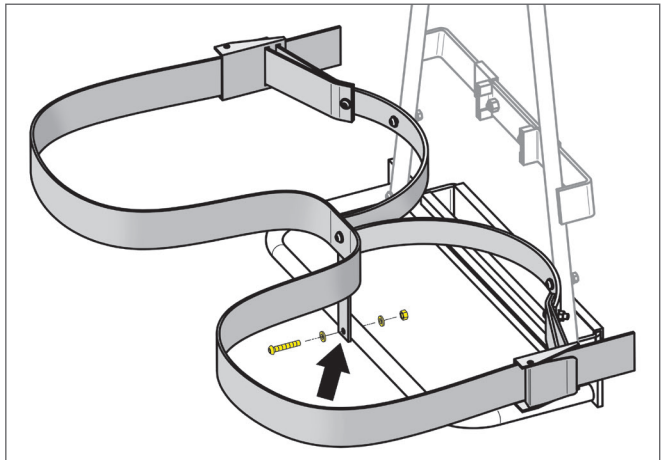


4. Fasten the upper bag support to the A-frame using (2) M6 Rubber Coated Bumper Nuts. Hand tighten.

5. Hand tighten any loose hardware.

6. Install bag attachment to safety grab bar.

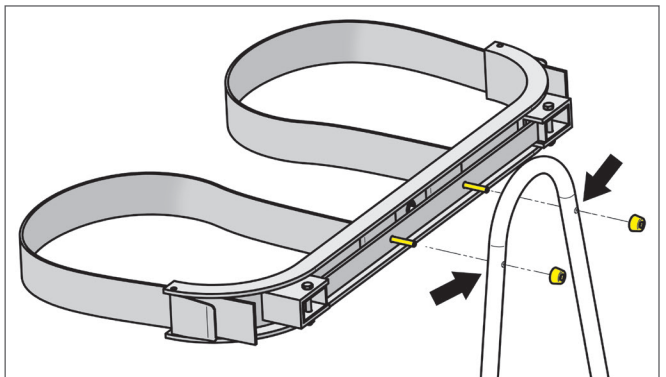

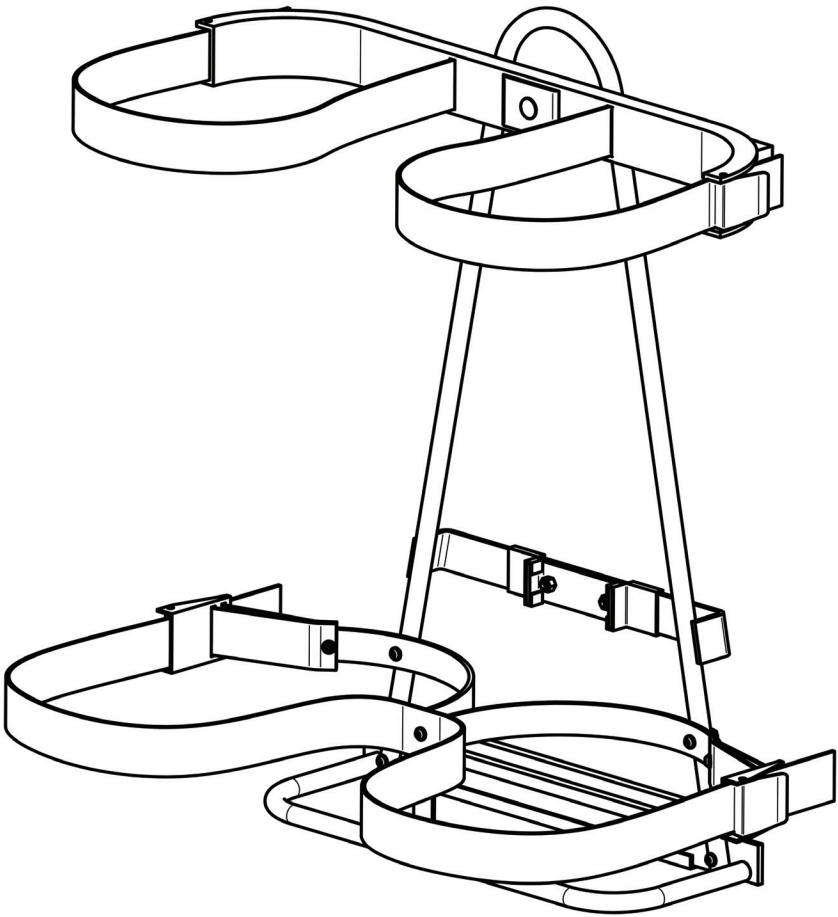

This completes the installation of your RHOX Bag Attachment.  
Please enjoy safely!

Scan QR code or use the link to view our installation video library.  
<https://www.youtube.com/user/golfcartinstructions>

