


STEP (8.5) OLD MX5 SAFETY BAR INSTALLATION

Position the lower ends of the safety bar in footrest slots as shown and insert ***D-Ring pins*** through both for alignment. Then fasten the bottom of the tubes with ***1/4" x 1.0" bolts***, ***1/4" washers*** and ***1/4" lock washers***.

Fasteners located in Pack #4 of SEAT-DT5500-HW.

NOTE: Fully hand tighten Bolts.

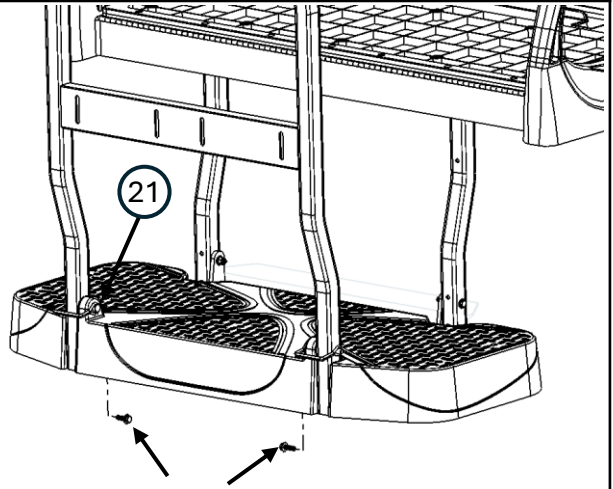

INSTALLATION IS NOW COMPLETE!
PLEASE ENJOY SAFELY!