




WIN-1005, 1006
Windshields

Club Car DS
New Style, 2000+

Installation Instructions

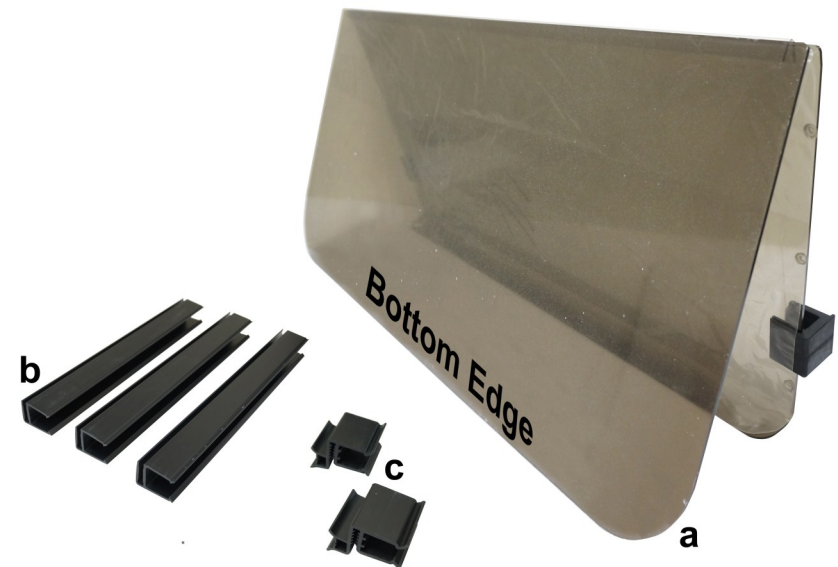



Contents of WIN-1005, 1006 Windshield Kit:

- a (1 ea.) Two Piece Windshield (WIN-1006 shown)
- b (3 ea.) 12" Plastic Extrusions
- c (2 ea.) 2.25" Plastic Extrusions


Caution: Please read through the instructions carefully. Handle the windshield with caution to prevent the surface from being scratched, chipped and/or damaged.

Installation Instructions

1. After removing the windshield from the box, place it on a clean soft surface (i.e. cardboard) to protect it from being scratched or chipped.
2. Remove the two pieces of foam packaging from the sides of the windshield.
3. Peel back the protective plastic on the two bottom side edges just enough to install the extrusions. Do this on the front and back sides. (Edge shown above in yellow)
4. Place (1) 12" extrusion on the bottom side edge of the windshield as shown. Snap into place. Repeat for opposite side.

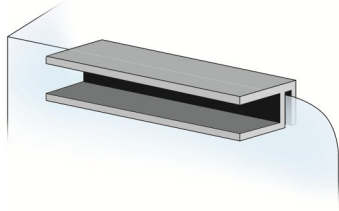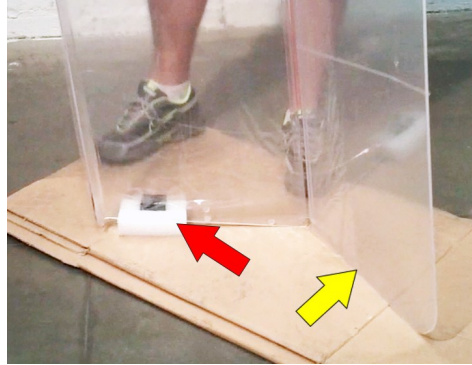


5. Place the last 12" extrusion on the bottom of the front top strut of the cart. The thin channel should face upward to receive the windshield as shown below in red. Center the extrusion on the strut. Snap into place.
6. Evenly space the 2.25" extrusions to either side of the longer one as shown in yellow. Snap into place.

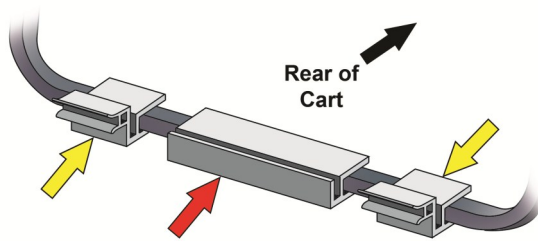


7. Peel back a few inches of the protective plastic on the entire bottom edge. Do this on the front and back sides.

8. With the windshield bent towards you, center the bottom edge over the extrusions on the front strut. Once centered, push the windshield downward, into thin channels.

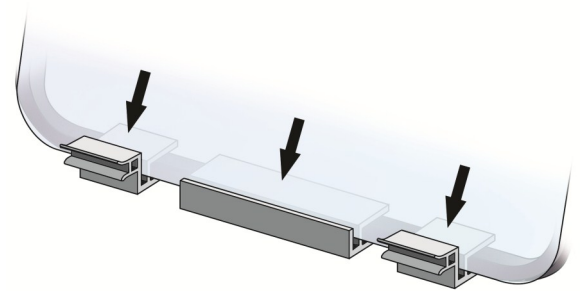

9. Once centered, push the extrusions on the sides of the bottom half of the windshield onto the front strut. Snap into place.

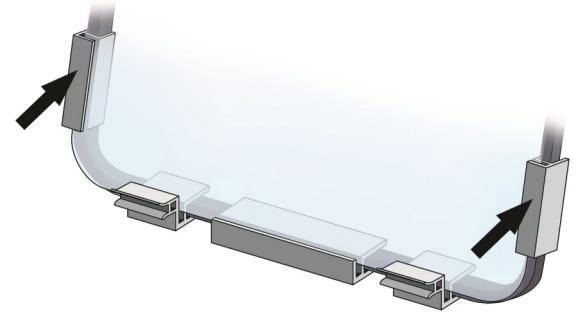

10. Remove protective plastic on all windshield surfaces.

11. The windshield can be used as is, in the folded position, or as a full windshield. To use as a full windshield, fold the upper portion up and clamp the (2) rubber pieces around the struts to secure in place.



This completes the installation of your WIN-1005 or 1006. Please enjoy safely!

Watch this installation and others on YouTube:
www.youtube.com/user/GolfCartInstructions