




SEAT-371

Yamaha Drive 2

RHOX Seat Kit

Installation Instructions

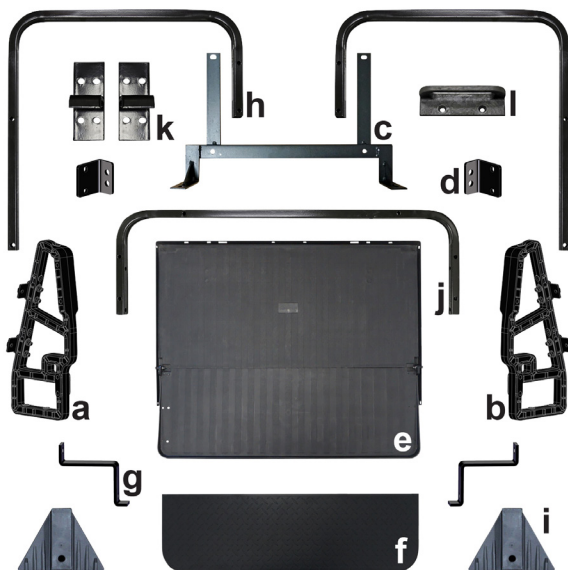

Contents of SEAT-371 Rear Seat Kit:

- a 1 ea. Front Seat Back Support, Driver Side
- b 1 ea. Front Seat Back Support, Passenger Side
- c 1 ea. Vertical Support Bracket
- d 2 ea. Sub-Assembly Brackets, Seat Platform
- e 1 ea. Seat Platform
- f 1 ea. Footplate
- g 2 ea. Footplate Mounting Brackets
- h 2 ea. Handrails
- i 2 ea. Footplate Support Brackets
- j 1 ea. Rear Seat Back Support Frame
- k 2 ea. Rear Seat Back Brackets
- l 1 ea. Seat Bottom Handle
- m 1 ea. Bag of Hardware (Contents on Next Page)

Caution: Please read through the instructions carefully. Installer is responsible for damage if instructions are not followed properly. Look behind each drill or cut location BEFORE YOU DRILL OR CUT. Installer is responsible for damage (i.e. drilling/cutting into a wiring harness, battery, fuel tank etc.). Extra installers will be helpful in some parts of the installation. Refer to vehicle's maintenance manual for torquing specifications on reused hardware.




Contents of SEAT-371 Hardware Kit		Bag #1	#2	#3	#4	#5
a	M10 x 80 Hex Head Bolts				2	
b	M10 x 70 Hex Head Bolts				4	
c	M10 x 45 Hex Head Bolts			2		2
d	M10 x 30 Hex Head Bolts			2		
e	M10 x 25 Hex Head Bolts		4			
f	M10 x 40 Phillips Head Truss Bolts				2	
g	M10 Flat Washers		8	8	14	4
h	M10 Nylock Nuts		4	4	8	2
i	M10 x 4mm Thick Spacers				2	
j	M8 x 55 Hex Head Bolts		4			
k	M8 Flat Washers		8			
l	M8 Nylock Nuts		4			
m	M6 x 50 Hex Head Bolts	2				
n	M6 x 25 Hex Head Bolts					4
o	M6 x 20 Phillips Head Countersunk Screws					2
p	M6 Lock Washers					4
q	M6 Flat Washers					4
r	M6 Fender Washers	2				

Tools Needed for Installation

- Sockets and Open Ended Wrenches (10mm, 12mm, 1/2", 13mm, 5/8", 17mm)
- Allen Wrenches (4mm, 5mm)
- Phillips Screwdriver
- Rubber Mallet (Optional)

Installation Preparation

1. Engage parking brake.
2. Turn key OFF.
3. Electric Carts Only: Place Tow/Run Switch in Tow.
4. Remove the side panel trim shown in yellow.

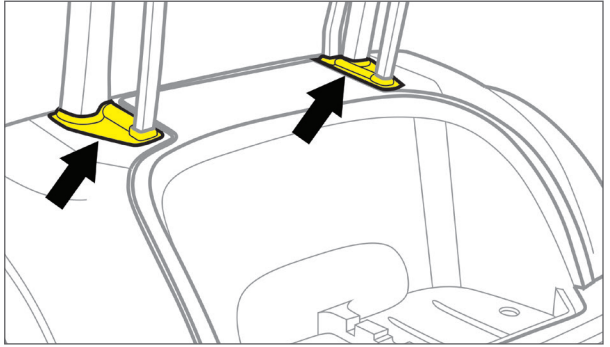


5. Remove top and drain seals (black arrows).


NOTE: If reinstalling the top, keep the top attached to the front struts and prop up the rear of the top using a broom handle or similar tool. Retain hardware.

6. Remove drain gutters (red arrow). Retain hardware.


NOTE: There are (2) bolts per drain gutter.

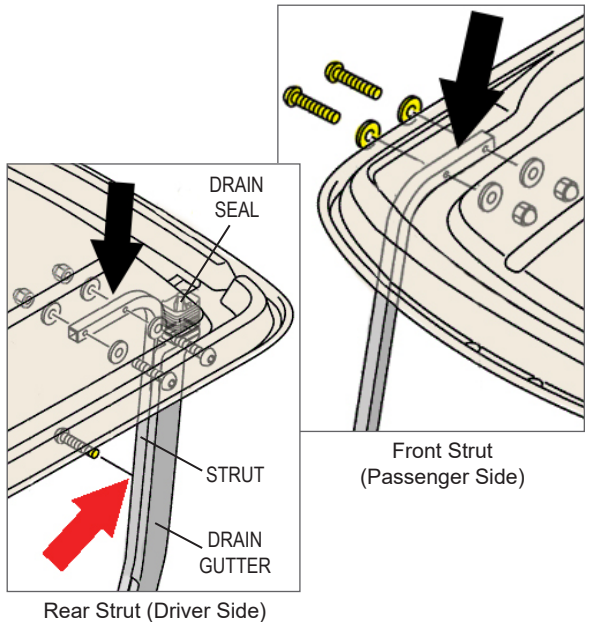

7. Remove the front seat back cushion (black arrows). Retain hardware.
8. Remove rear struts (blue arrows). Retain hardware.

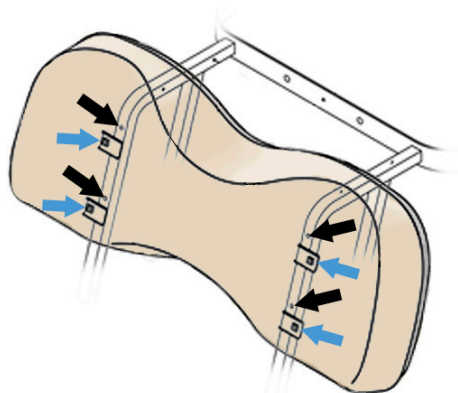

9. Remove the seat back support and the bag attachment assembly. Retain hardware.

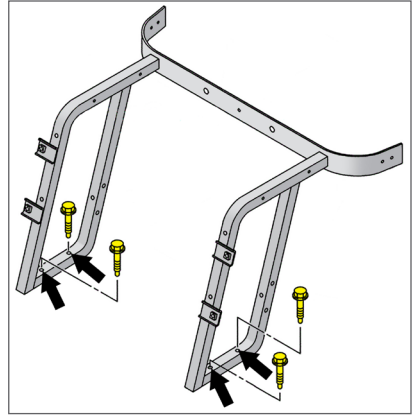

Rear Seat Kit Installation

1. Install the new front seat back support brackets where the original bracket was installed. Mount using the Original Hardware (black arrows).


NOTE: The driver and passenger side brackets are different.

2. Remove the (2) bolts in the bagwell area and discard.

3. Loosely fasten the vertical support bracket to the bagwell area using (2) M6 x 50 Hex Head Bolts and (2) Fender Washers (red arrows, **Bag #1**).


4. Install the sub-assembly brackets to the platform using (2) M10 x 25 Hex Head Bolts, (4) Flat Washers and (2) Nylock Nuts (**Bag #2**, Page 5).

TIP: Hand tighten enough so the brackets are snug but still adjustable.

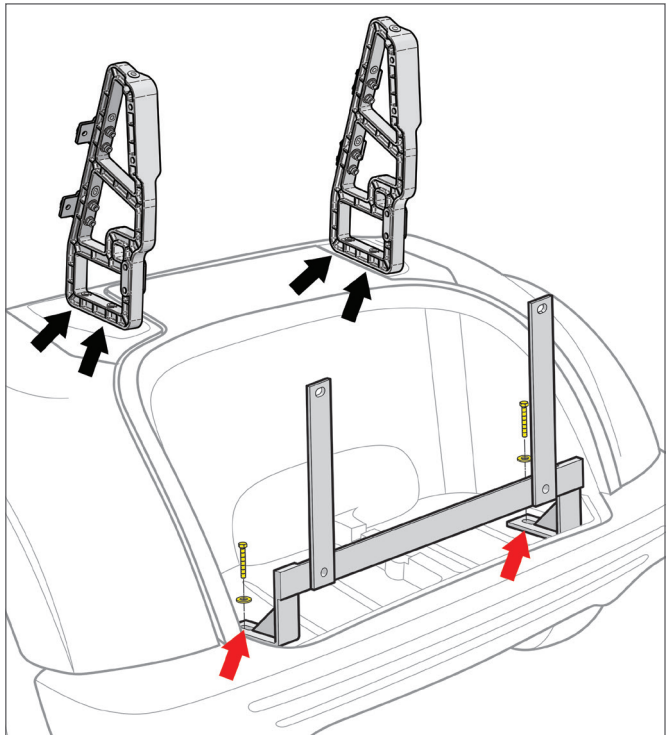


5. Loosely install the seat platform sub-assembly to the front seat back support brackets using (4) M8 x 55 Hex Head Bolts, (8) Flat Washers and (4) Nylock Nuts (**Bag #2**).


NOTE: Protect the rear body from scratches with a thick blanket or clean piece of cardboard. An extra installer is recommended for this step.

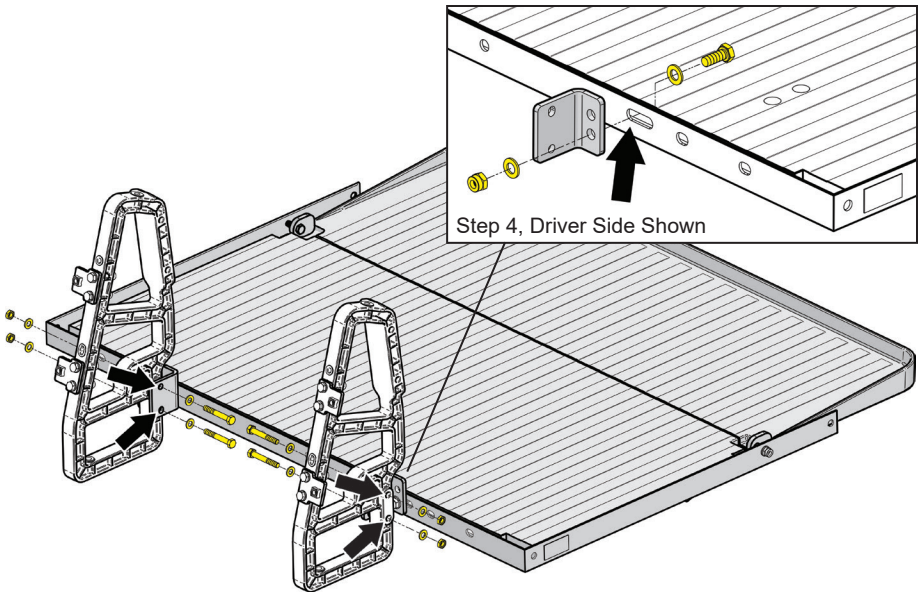


6. With the platform folded, loosely install the seat platform to the vertical support bracket using (2) M10 x 25 Hex Head Bolts, (4) Flat Washers and (2) Nylock Nuts (**Bag #2**).

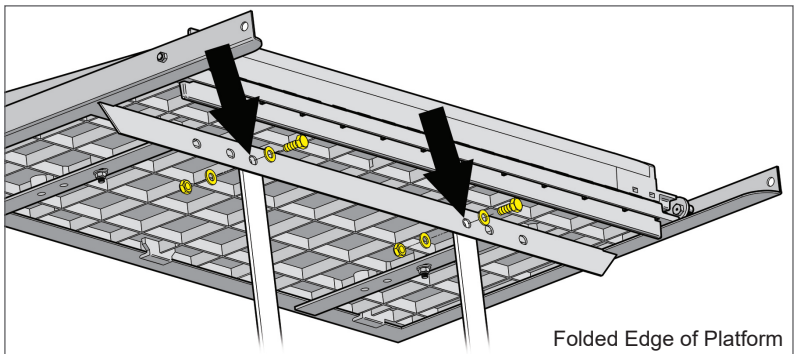

7. Install the footplate mounting brackets to the holes on the footplate using (2) M10 x 45 Hex Head Bolts, (4) Flat Washers and (2) Nylock Nuts (**Bag #3**).

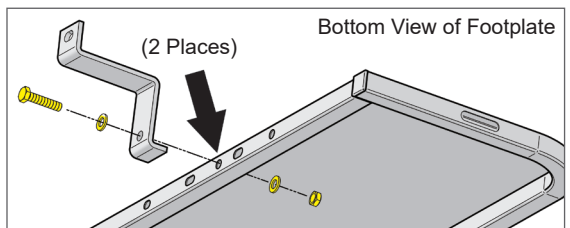

8. Loosely fasten the footplate to the vertical support bracket using (2) M10 x 30 Hex Head Bolts, (4) Flat Washers and (2) Nylock Nuts (**Bag #3**).

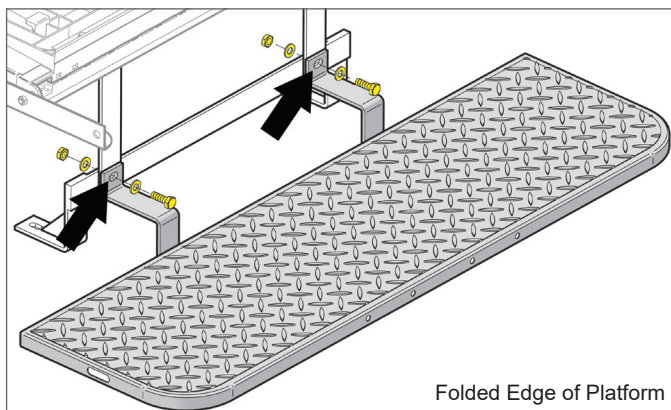


9. Loosely fasten the longer leg of (1) handrail to the rearmost portion of the seat platform (blue arrow) using (1) M10 x 40 Phillips Head Truss Bolt, (1) Flat Washer & (1) Nylock Nut (**Bag #4**).

10. Slide a footplate support bracket over the long end of the handrail until the holes align (black arrow). The bracket will cradle the footplate. Loosely fasten the bracket and handrail to the footplate using (1) M10 x 80 Hex Head Bolt, (2) Flat Washers and (1) Nylock Nut (**Bag #4**).


11. Repeat Steps 9 and 10 for the opposite handrail.

12. Place the rear seat back support frame between the handrails. Loosely fasten the support frame to the bottom of the handrails and the seat platform (red arrow) using (2) M10 x 70 Hex Head Bolts, (4) Flat Washers and (2) Nylock Nuts (**Bag #4**)

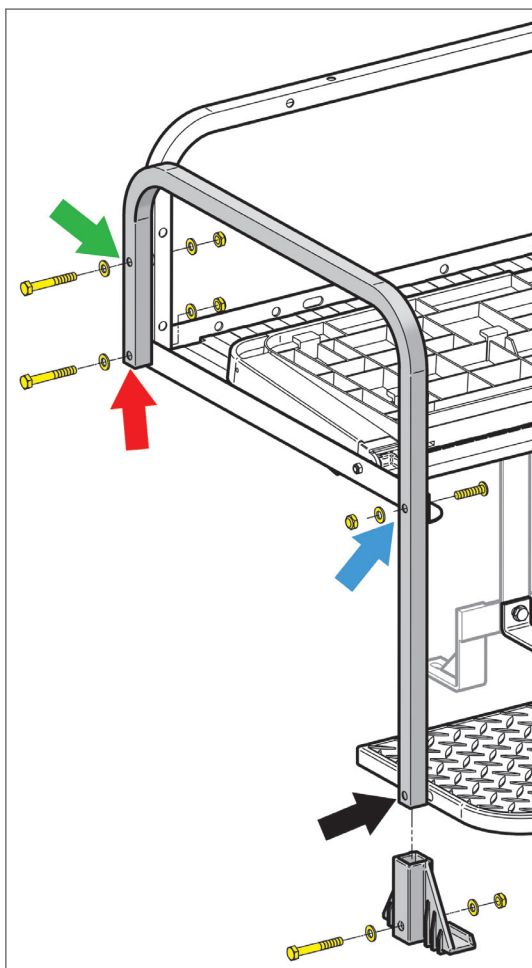


13. Loosely fasten the top of the handrails to the support frame (green arrow, page 6) using (2) M10 x 70 Hex Head Bolts, (4) Flat Washers, (2) Nylock Nuts and (2) Spacers (**Bag #4**).
14. Install the front seat back cushion using the Original Hardware. Loosen the front seat back supports if the holes do not align.
15. Tighten all hardware.


16. Install the rear seat back brackets to the rear seat back using (4) M6 x 25 Hex Head Bolts, (4) Lock Washers and (4) Flat Washers (**Bag #5**). Hand tighten.

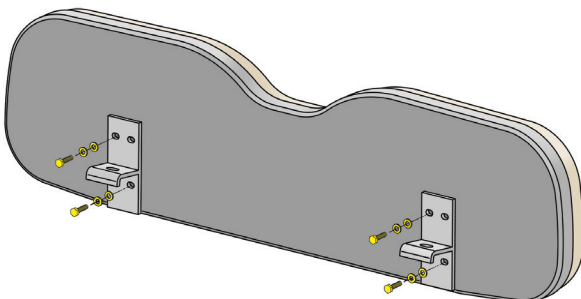


17. Install the rear seat back assembly to the rear seat back support frame using (2) M10 x 45 Hex Head Bolts, (4) Flat Washers and (2) Nylock Nuts (**Bag #5**).

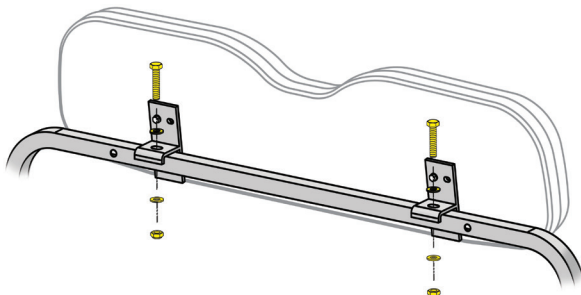

18. Align the recessed areas on the seat bottom cushion with the locking tabs on the seat platform (yellow). Slide the seat bottom onto the platform until it locks into place on the locking tabs.

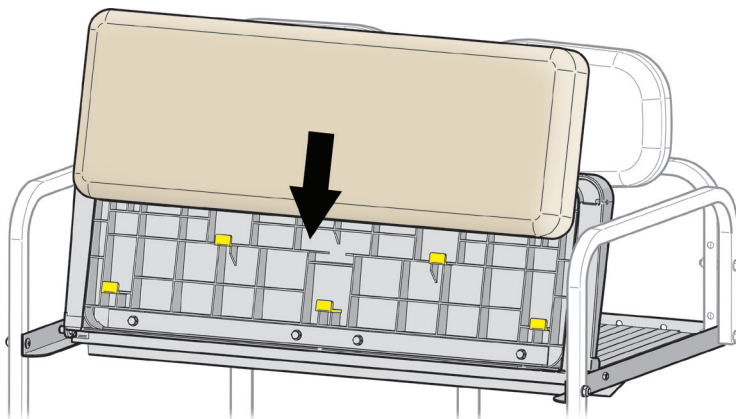

19. Fasten the handle to the seat platform using (2) M6 x 20 Phillips Head Countersunk Screws (**Bag #5**). Hand tighten to lock the seat bottom into place.

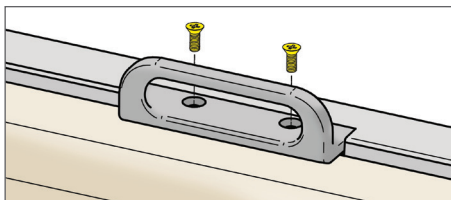


20. If reinstalling the OE rear struts, drain gutters and drain seals, install them to the front seat back support frame (red arrows).

If installing struts for an extended top, install them to the rear seat back support frame (black arrows).

NOTE: RHOX 88" Tops require TOP-0108 rear struts.

21. Reinstall top using Original Hardware (if applicable).

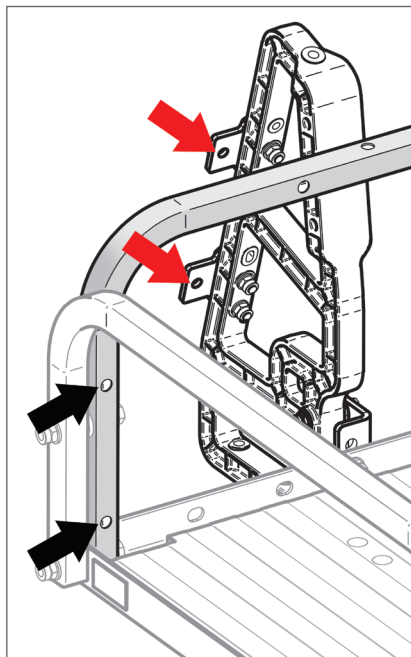

This completes the installation of your
RHOX 300 Series Rear Seat Kit. Please enjoy safely!

Scan QR code or use the link below to
view the installation video.
<https://vimeo.com/user39935056>

