




SEAT-951 & SEAT-952


Yamaha Drive
RHOOX 900 Series Seat Box Kit
Installation Instructions

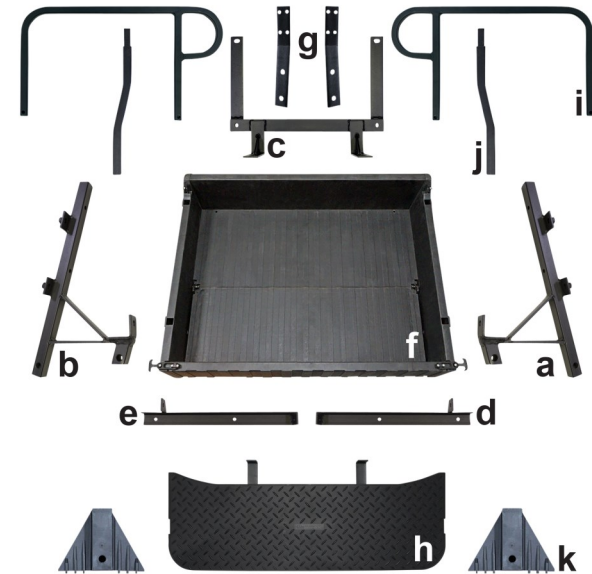

Contents of SEAT-951/952 Rhino Seat Box Kit:

- a (1 ea.) Front Seat Back Support Bracket, Passenger Side
- b (1 ea.) Front Seat Back Support Bracket, Driver Side
- c (1 ea.) Vertical Support Bracket
- d (1 ea.) Horizontal Support Bracket, Passenger Side
- e (1 ea.) Horizontal Support Bracket, Driver Side
- f (1 ea.) Utility Box
- g (2 ea.) Rear Seat Back Brackets
- h (1 ea.) Footplate
- i (2 ea.) Handrails
- j (2 ea.) Handrail Extensions
- k (2 ea.) Footplate Support Brackets
- l (1 ea.) Box of Hardware (Contents on Next Page)

Caution: Please read through the instructions carefully. Installer is responsible for damage if instructions are not followed properly. Look behind each drill or cut location BEFORE YOU DRILL OR CUT. Installer is responsible for damage (i.e. drilling/cutting into a wiring harness, battery, fuel tank etc.). Extra installers will be helpful in some parts of the installation. Refer to vehicle's maintenance manual for torquing specifications on reused hardware.

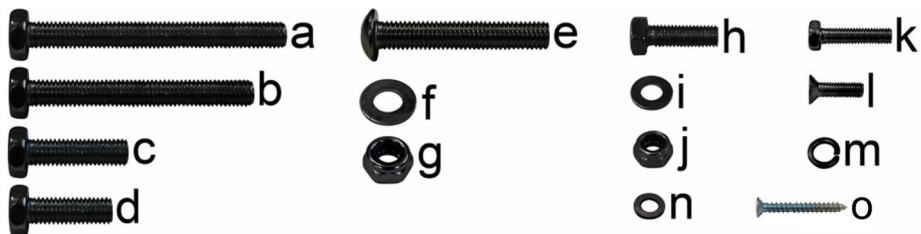

Contents of SEAT-951/952 Hardware Kit		Bag #1	#2	#3	#4	#5
a	M10 x 90 Hex Head Bolts	2				
b	M10 x 80 Hex Head Bolts			2		
c	M10 x 35 Hex Head Bolts	2	2			
d	M10 x 30 Hex Head Bolts		4			
e	M10 x 60 Phillips Head Countersunk Screws		2			
f	M10 Flat Washers	8	12	4		
g	M10 Nylock Nuts	4	6	2		
h	M8 x 25 Hex Head Bolts				4*	
i	M8 Flat Washers				8*	
j	M8 Nylock Nuts				4	
k	M6 x 25 Hex Head Bolts					4
l	M6 x 15 Phillips Head Countersunk Screws					4*
m	M6 Lock Washers					4
n	M6 Flat Washers					4
o	ST6.3 x 45 Phillips Head Countersunk Screws					6

* Hardware is pre-installed on box if not in bags.

Tools Needed For Installation

- Sockets and Open Ended Wrenches: 10mm, 12mm, 1/2", 13mm, 15mm, 17mm
- Allen Wrenches: 4mm, 5mm
- Phillips Screwdriver
- Drill and Drill Bit (3/8")
- Rubber Mallet (Optional)

Installation Preparation

1. Engage parking brake.
2. Turn key OFF.
3. Electric Carts Only: Place Tow/Run Switch in Tow.
4. Remove top and drain seals (black arrows).


NOTE: If reinstalling the top, keep the top attached to the front struts and prop up the rear of the top using a broom handle or similar tool. Retain hardware.

5. Remove drain gutters (red arrow). Retain hardware.


NOTE: There are (2) bolts per drain gutter.

6. Remove the front seat back cushion (black arrows). Retain hardware.
7. Remove rear struts (blue arrows). Retain hardware.



8. Remove the access panel. Retain rivets.

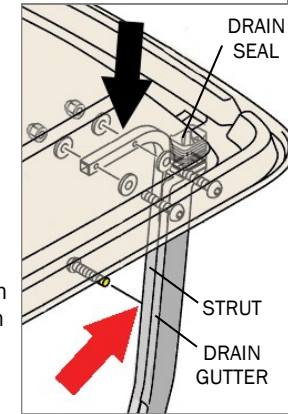


Rear Strut (Driver Side)

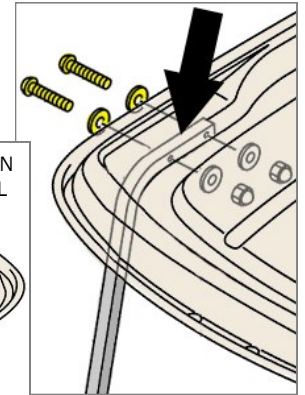

Front Strut (Passenger Side)

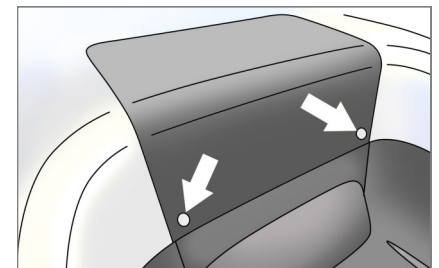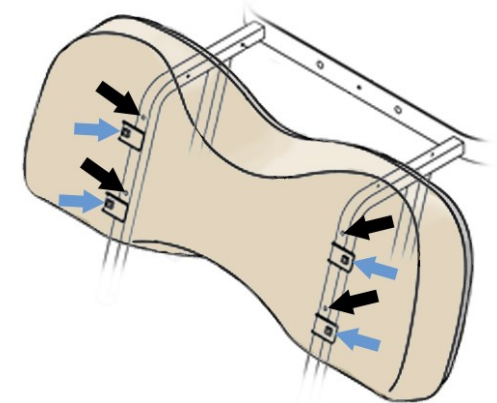

- Remove the seat back support and the bag attachment assembly. Retain hardware.

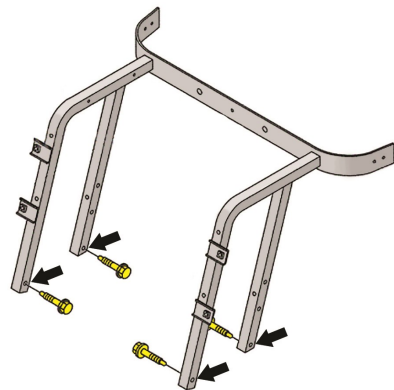


Rear Seat Kit Installation


- Install the new front seat back support brackets where the original bracket was installed. Mount using the Original Hardware.

NOTE: The driver and passenger side brackets are different.

- Reinstall the access panel using the Original Rivets.

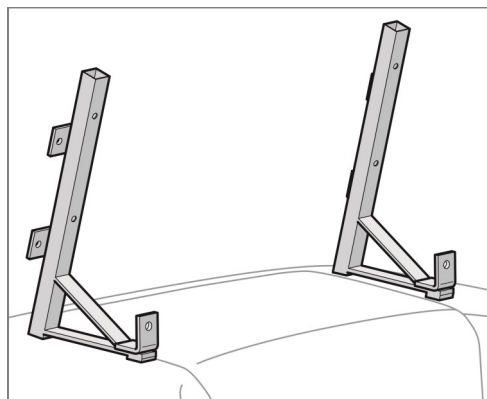

- Remove the (2) bolts in the bagwell area. Use a 3/8" drill bit to open up the (2) holes that the hardware occupied. Drill completely through the frame.
- Loosely fasten the vertical support bracket to the bagwell area using (2) 10mm x 90 Hex Head Bolts, (4) Flat Washers and (2) Nylock Nuts (**Bag #1**).

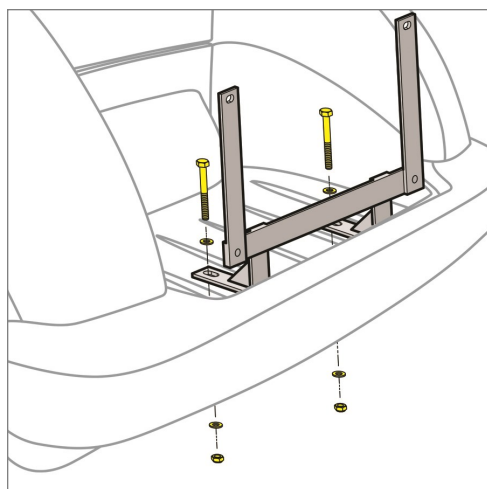


Extended Top Installation

- If installing struts for an extended top, remove the end caps from the front corners of the utility box (red arrow on previous page).
- Insert the struts inside of the utility box where the end caps were removed. Fasten the struts to the box using the hardware preinstalled on the box. TOP-0108 rear struts are shown.

NOTE: RHOX 88" Tops require TOP-0108 rear struts.

- Install extended top.
- Tighten all hardware.

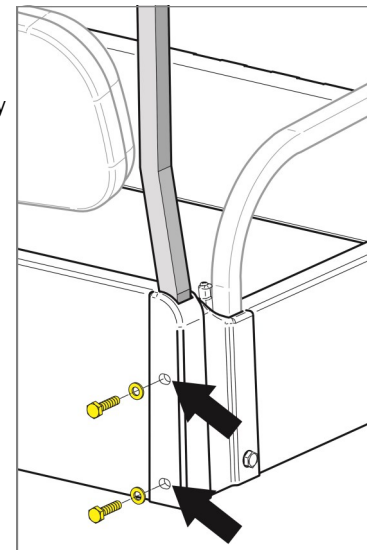


This completes the installation of your
RHOX 900 Series Seat Box Kit. Please enjoy safely!
Scan QR code or use the link below to view the installation video.
<https://youtube.com/@RHOXGarage>




17. **FOR SEAT-951 ONLY:** Lock the seat bottom into place with the (2) small retaining plates and (4) M6 x 15 Phillips Head Countersunk Screws (**Bag #5**).


NOTE: The retaining plates and screws may be installed on the utility box if not in Bag #5.

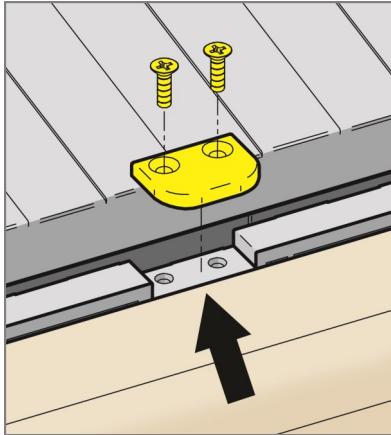


18. If reinstalling the OE rear struts, install them to the front seat back support frames using the Original Hardware (black arrows).
19. If reinstalling the OE rear struts, install them to the front seat back support frames using the Original Hardware (black arrows).
20. Reinstall OE top and drain gutters using the Original Hardware.
21. Tighten all hardware.

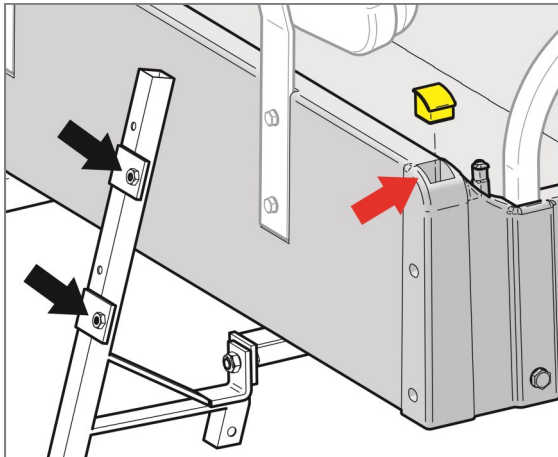

5. Loosely fasten the horizontal support brackets to the front seat back support brackets and vertical support bracket using (4) M10 x 30 Hex Head Bolts, (8) Flat Washers and (4) Nylock Nuts (**Bag #2**).

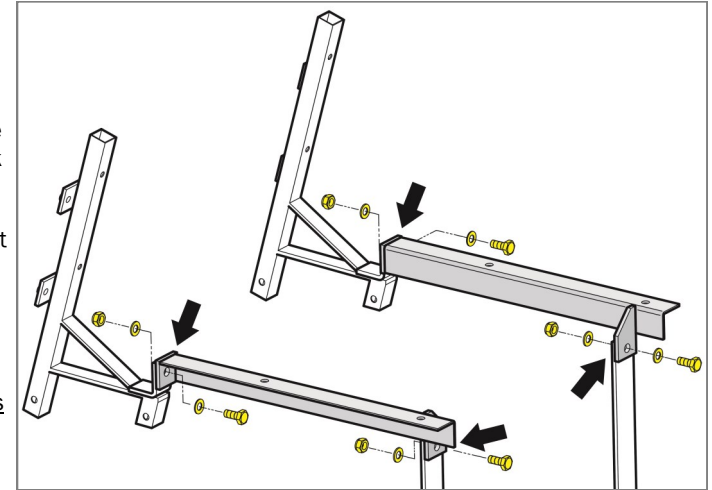


6. Loosely fasten the footplate to the vertical support brackets using (2) M10 x 35 Hex Head Bolts, (4) Flat Washers and (2) Nylock Nuts (**Bag #1**).
7. Install the front seat back cushion using the Original Hardware. Loosen the front seat back supports if the holes do not align.

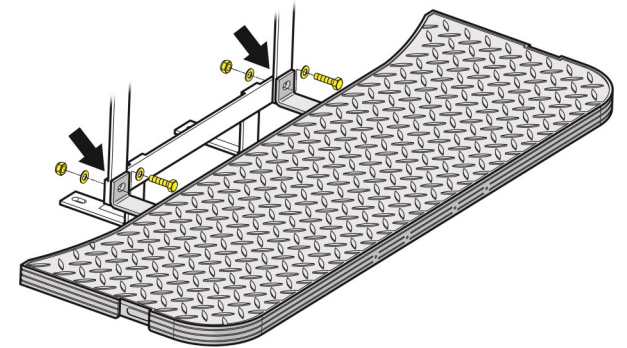


8. Loosely fasten the rear seat back brackets to the rear seat back cushion using (4) M6 x 25 Hex Head Bolts, (4) Lock Washers and (4) Flat Washers (black arrows, **Bag #5**).
9. Loosely fasten the seat back assembly to the front of the utility box using (4) M8 x 25 Hex Head Bolts and (4) Flat Washers (red arrows, **Bag #4**).

NOTE: Hardware may be pre-installed on box if not in Bag.

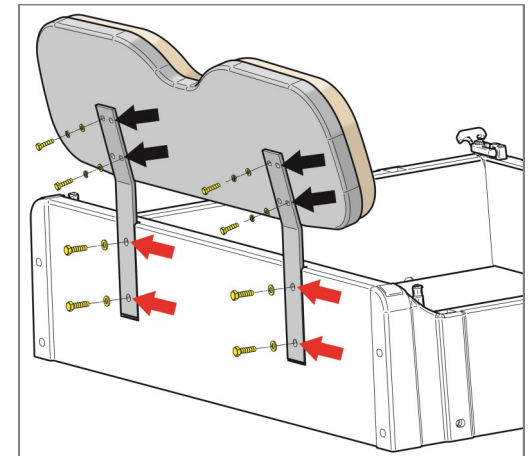

10. Tighten the hardware left loose in Steps 8 and 9.

11. Place the seat box assembly on top of the horizontal support brackets. Loosely fasten the box to the brackets using (4) M8 Flat Washers and (4) M8 Nylock Nuts (**Bag #4**).

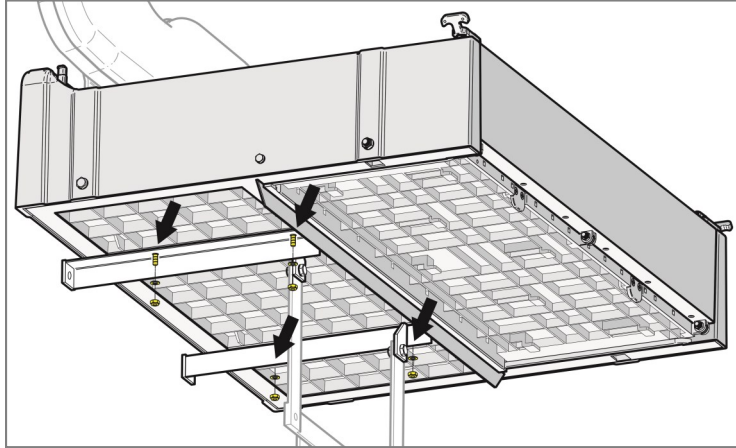


12. Place the handrails and handrail extensions through the openings in the box.


13. Loosely fasten the front portion of the handrails to the box using (2) M10 x 35 Hex Head Bolts and (2) Flat Washers (red arrow, **Bag #2**). Do not overtighten.

14. Loosely fasten the handrail extensions to the handrails and the box using (2) M10 x 60 Phillips Head Countersunk Screws, (2) Flat Washers and (2) Nylock Nuts (blue arrow, **Bag #2**). Do not overtighten.

15. Slide the footplate support brackets over the handrail extensions until the holes align. The brackets will cradle the footplate. Loosely fasten the brackets and handrail extensions to the footplate using (2) M10 x 80 Hex Head Bolts (4) Flat Washers and (2) Nylock Nuts (black arrow, **Bag #3**).

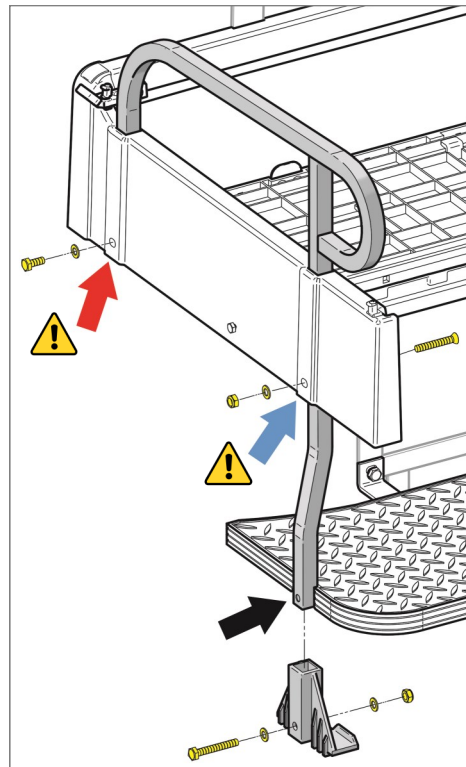

16. **FOR SEAT-951:** Slide the rear seat bottom onto the underside of the utility box deck until it clicks into place on the locking tabs (yellow).

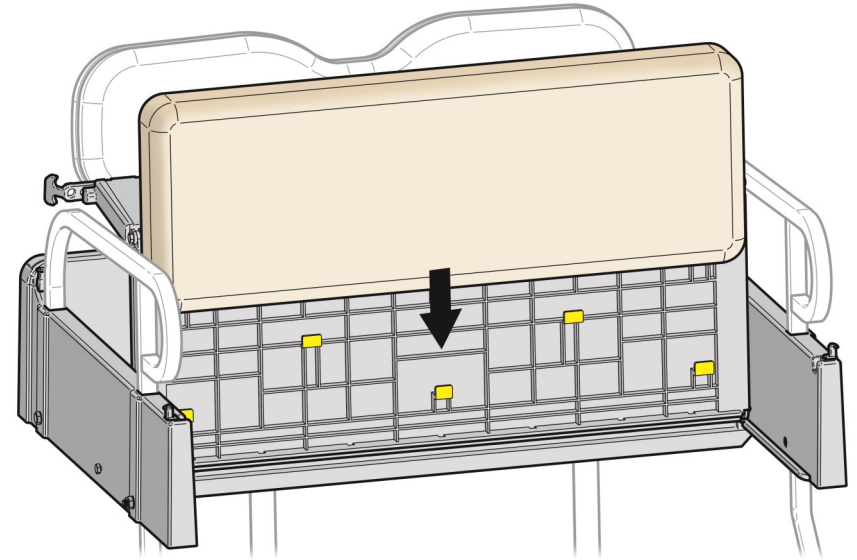

FOR SEAT-952: Align the seat bottom cushion with the holes on the platform. Fasten the seat bottom cushion to the platform using (8) ST6.3 x 45 Phillips Head Countersunk Screws (**Bag #5**). Hand tighten.

